


BATH SHELF CORNER  
MOUNTING GUIDE

**STEP 1.**


Level the shelf and mark the two points for drilling.

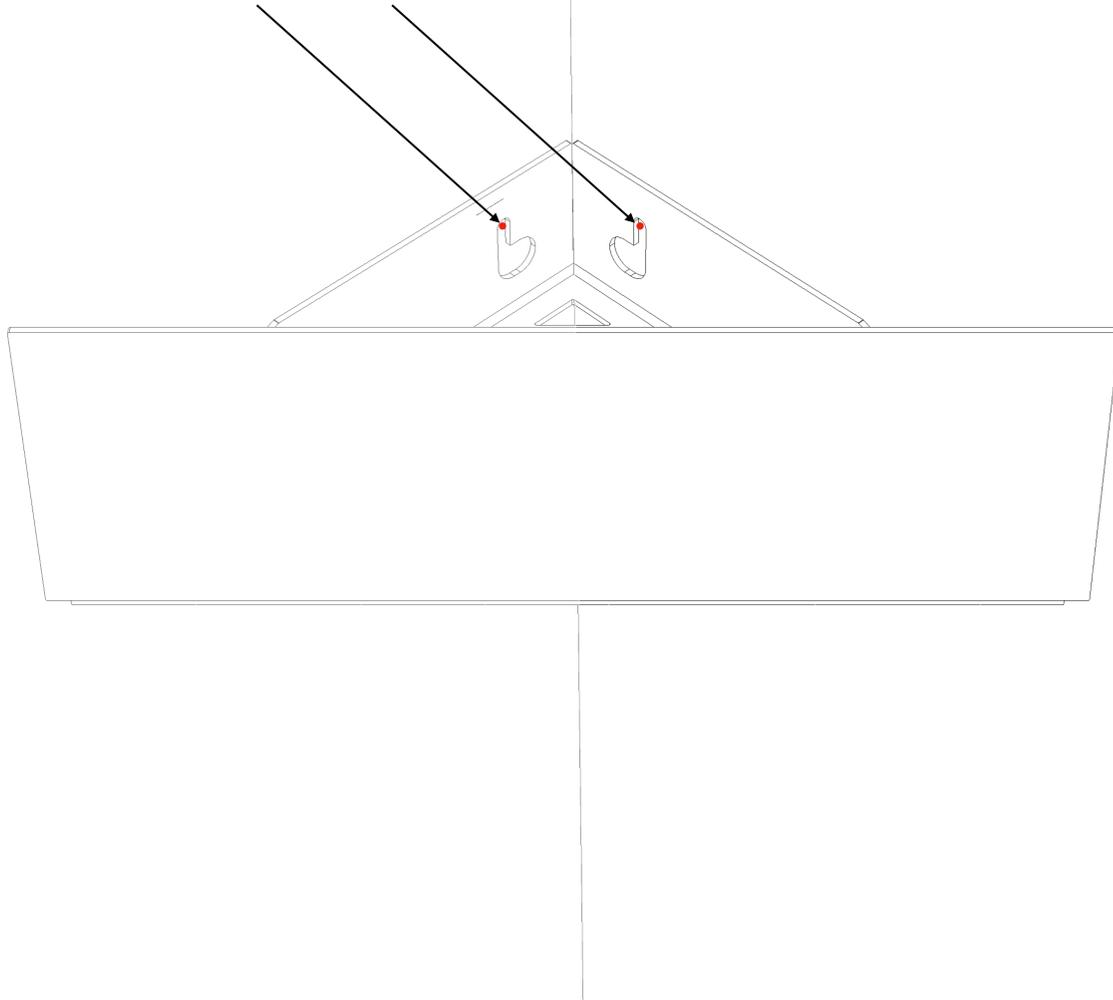

**STEP 2.**

Drill holes, place wall anchor and place the attached NICHBA screws

NOTE: leave the screw 2-3 mm from the wall until shelf is attached.

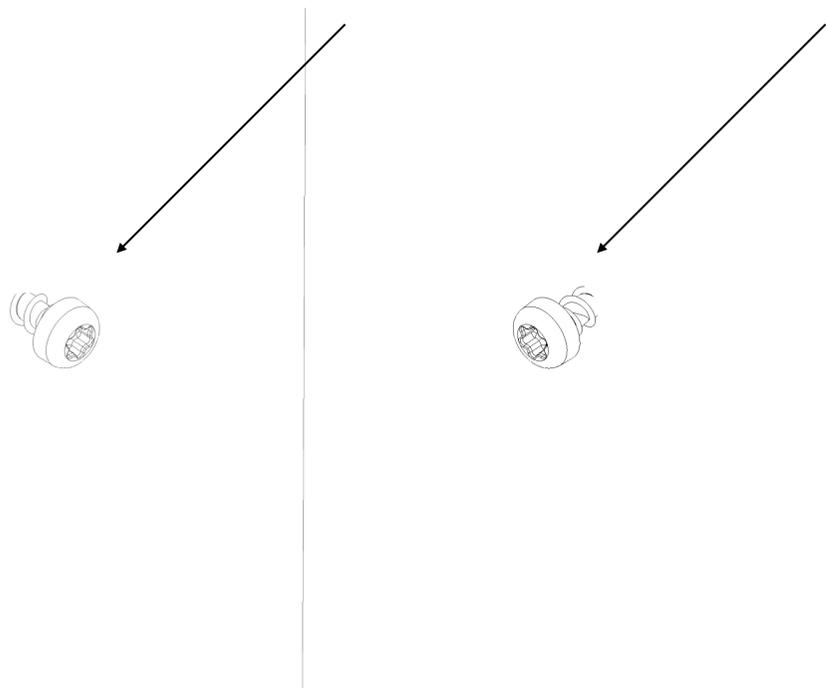


**NICHBA**

D E N M A R K


STEP 3.

Hang the shelf onto the pre-mounted screws through its keyslot holes.

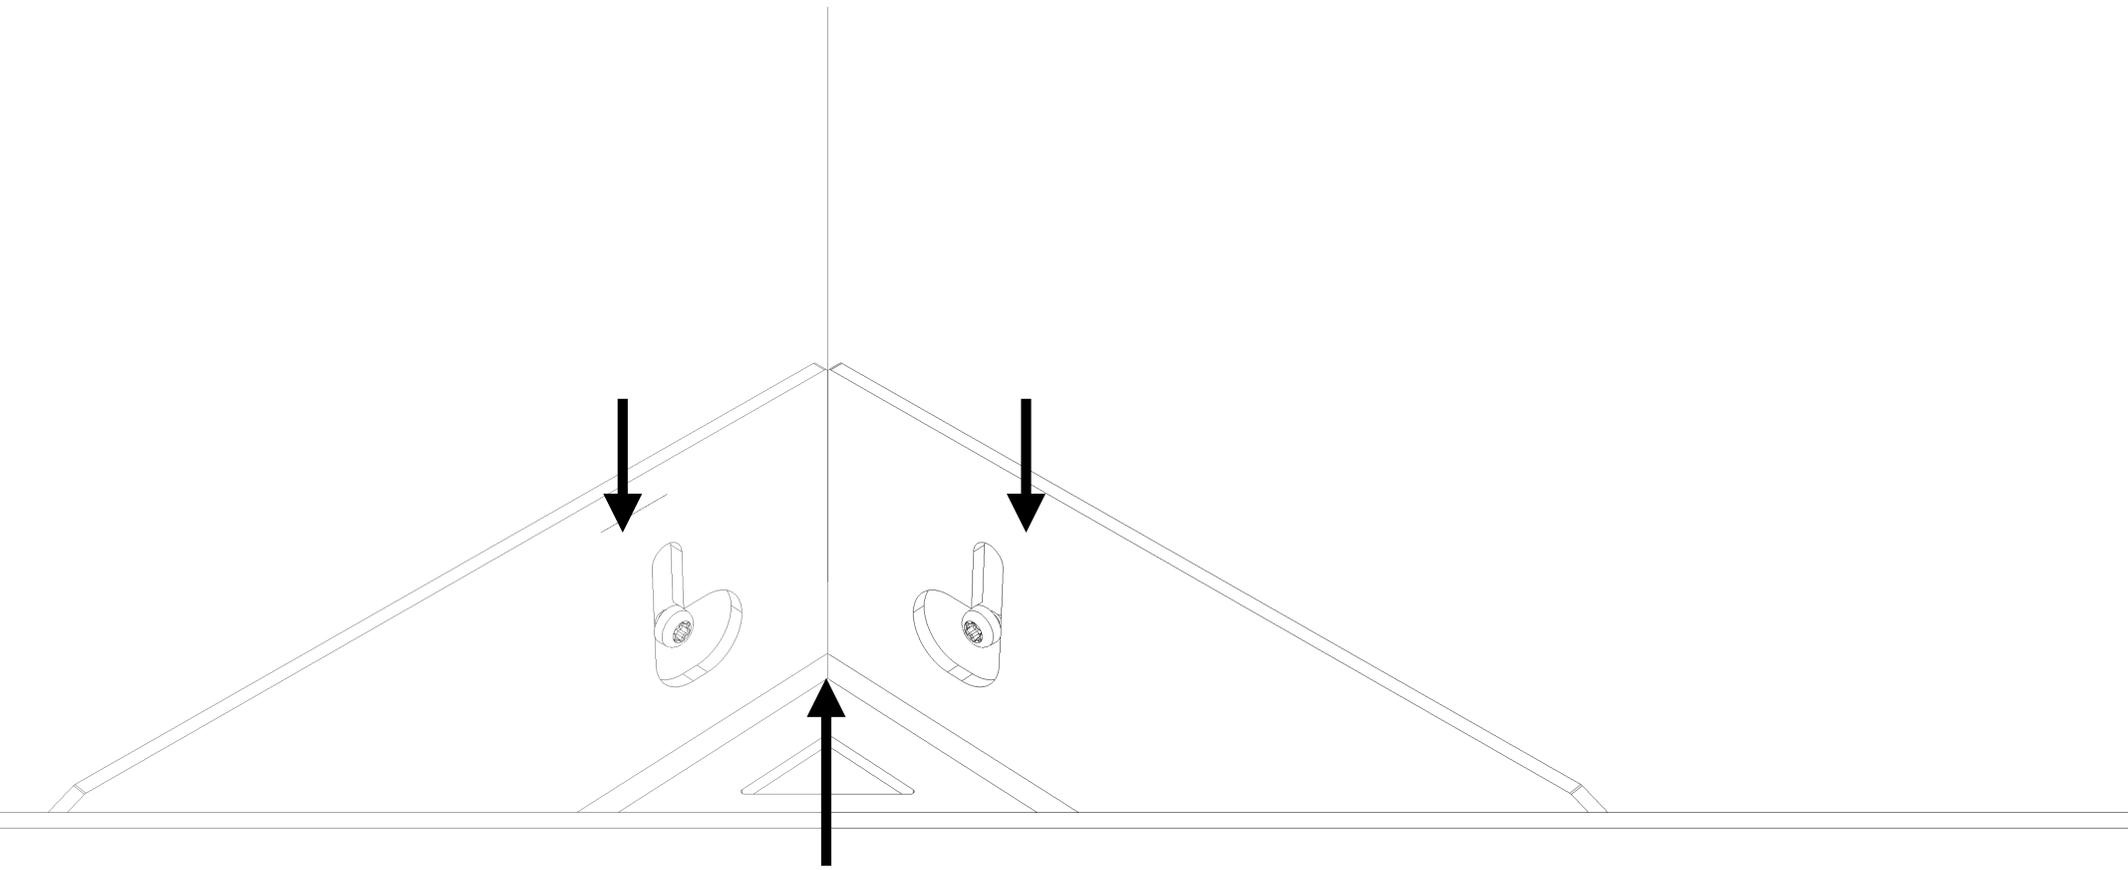

STEP 4.

Lastly tighten the screws and you're all set.

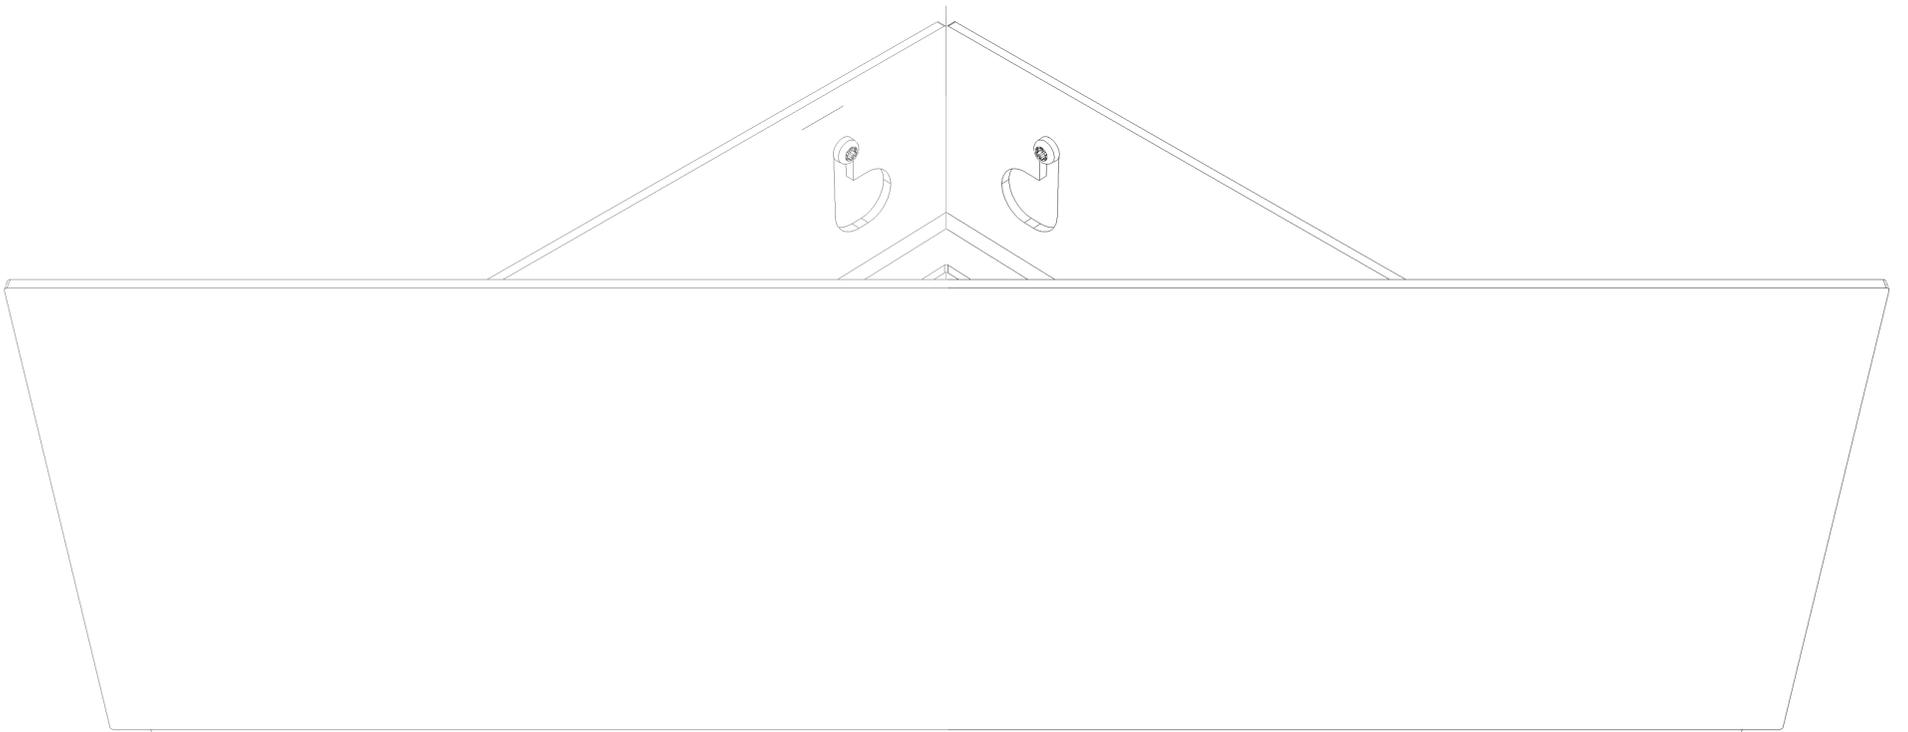

NICHBA

D E N M A R K