




ASSEMBLE THE PAN RAIL TO THE SHELF USING THE TWO CONNECTING BOLTS SUPPLIED, THREADING THE BOLTS INTO THE PAN RAIL

USE A 3MM ALLEN KEY BOLT TO TIGHTEN THEM

6

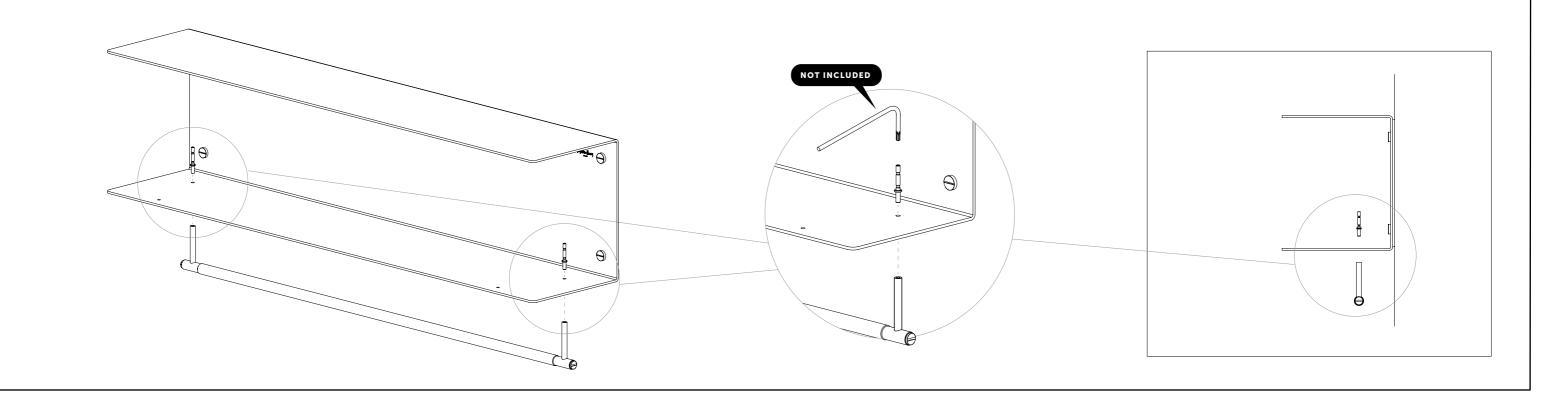



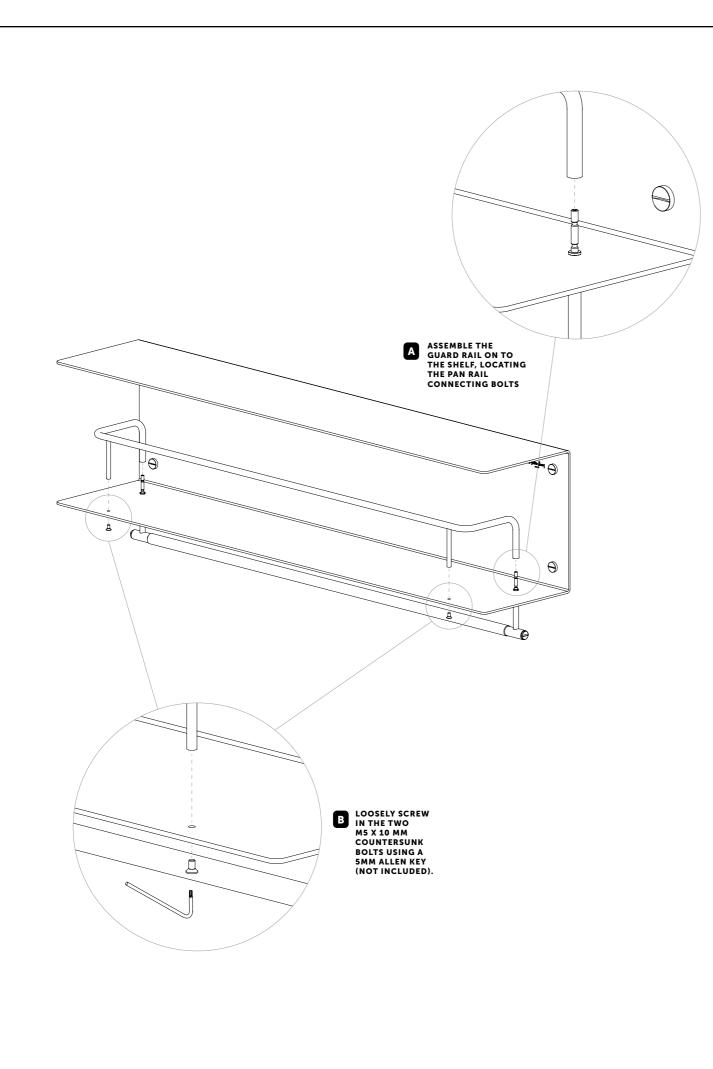


7

SCREW IN THE FOUR GRUB SCREWS TO THE HOLES ON THE BACK OF THE GUARD RAIL, ENSURING THEY ARE TIGHT.

8

ONCE GRUB SCREWS ARE TIGHT, TIGHTEN THE TWO M5 X 10 MM COUNTERSUNK BOLTS FOR THE GUARD RAIL ON THE BOTTOM OF THE SHELF

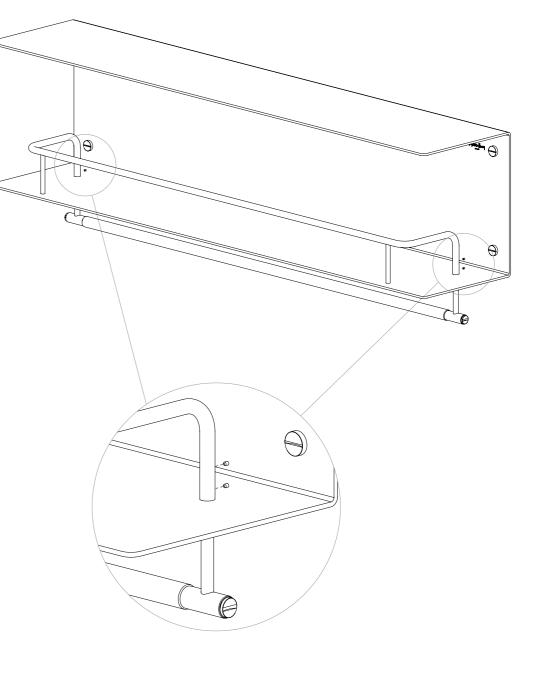

[ end. ORDINARY. ]